

Thank you for purchasing our equipment. This is an outdoor infrared heater for the terrace, veranda, pergola or balcony with year-round use. Please read this manual carefully and heed the safety warnings and instructions before installing, using or repairing the unit. This will ensure not only the protection of persons, but also the long-term viability of the equipment.

TECHNICAL PARAMETERS

Power supply	220-240V / 50Hz
Power	800/2000W
IP coverage	IP24
Length of supply cable	160cm

- Maximum power of up to 2000 W heats surroundings of up to 15 m² and up to 30 m³
- Upper and lower heating elements radiate heat at 360°
- Easy handling (light weight 2.5 kg) and hanging (chain and hook with height adjustment)
- Simple operation via pull switch

DESCRIPTION OF EQUIPMENT

1. Heater
2. Clasp cord
3. Base
4. Chain



SAFETY NOTICE

- If the safety instructions are ignored, the manufacturer is not liable for any damage.
- If the power cord is damaged, it must be replaced by the manufacturer, its service representative or similarly qualified person to avoid potential hazards.
- Never carry the appliance by pulling the power cord and make sure that the cord cannot get stuck.
- Never leave the appliance on unattended.
- This appliance may only be used in the home for the purpose for which it was manufactured.
- This appliance must not be used by children under 8 years of age. This appliance may be used by persons over 8 years of age and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge only if they are supervised or have been instructed in the safe use of the appliance and understand the possible risks. Children must not play with the appliance. Keep the appliance and cord out of the reach of children under 8 years of age. Cleaning and maintenance cannot be carried out by children who are under 8 years of age and unsupervised.
- To protect yourself from electrical shock, do not immerse the power cord, plug or appliance in water or other liquids.
- **WARNING:** To prevent overheating, do not cover the heater.
- **WARNING:** Some parts of this product may become very hot and cause burns. Extreme care should be taken in the presence of children or vulnerable persons.
- Children under 3 years of age should be kept away unless under constant supervision.
- Do not use this appliance with a programmer, timer, separate remote control system or any device that automatically turns on the heater as there is a risk of fire if the appliance is covered or improperly positioned.
- Do not use this heater near a bathtub, shower or swimming pool.
- No beams, joists or trusses should be cut or cut when installing the unit.
- Please do not place the unit near curtains or other flammable materials. This could cause a fire.
- Under no circumstances should the unit be covered with insulation or other similar material.
- The device must be installed at least 1.8m above the ground.
- The device must not be placed directly under the socket.

BEFORE FIRST USE

- Remove all packaging material.
- Plug the power cord into a power outlet.
(Before connecting the appliance, check that the voltage indicated on the appliance matches the local mains voltage. Voltage 220V-240V 50/60Hz)
- Hang the heater from a solid, horizontal ceiling.
- The ceiling hook must be able to support 3 to 4 times the weight of the patio heater.
- Hang the hook on the ceiling hook and adjust the height of the patio heater by pulling the chain link that runs through the ceiling hook.
- The distance between the patio heater and the floor must be greater than 1.8 m, and the distance between the heater and the ceiling must be at least 30 cm.

USE

- Pull the switching cable to switch on the device. The lower and upper heating elements heat up and start radiating heat.
- The heater is not controlled by the thermostat and continues to give off heat until it is turned off. Always keep an eye on the heater while it is on.
- Pull the switching cord again to switch off the device.

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for it to cool down.
- Clean the appliance with a damp cloth. Never use strong or abrasive cleaners, scrapers or scouring pads that damage the appliance.
- Never wash the heater in water, never immerse it in water or any other liquid.
- Regularly remove dirt and insects behind the heating grille with a vacuum cleaner.

This appliance should not be disposed of in household waste at the end of its useful life, but must be taken to a central collection point for recycling electronics and household electrical appliances. The symbol on the appliance, the instruction manual and the packaging alert you to this important issue. The materials used in this appliance are recyclable.

By recycling used household appliances, you make a significant contribution to protecting the environment. Ask your local municipality for information on the collection point.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.
On request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz/en.



SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.