


Thank you for purchasing our equipment. Please read this manual carefully and heed the safety warnings and instructions before installing, using or repairing the equipment. This will ensure not only the protection of persons, but also the long life of the equipment.

TECHNICAL PARAMETERS

Power	230V/16A (3680W)
Operating temperature	-10 + 40°C
Coverage	IP20 (indoor use)

FIRST CONSECRATION

When the device is started or after resetting the device, all the information on the display lights up for about 3 seconds. The device then switches to the main screen. If the display is faulty, reset the device.

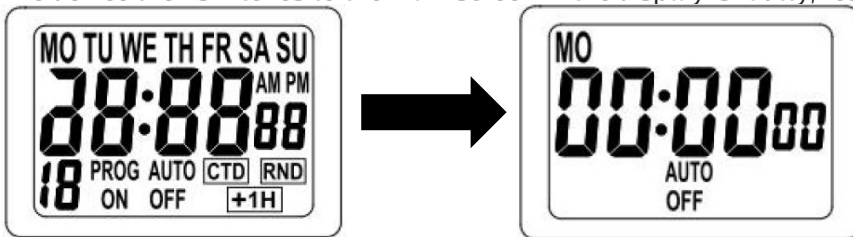

SETTING HOURS AND DAYS

Setting days

Press the CLOCK button, then the MO at the top of the display will flash. Press the WEEK button repeatedly to select the current day of the week: **MO** (Monday), **TU** (Tuesday), **WE** (Wednesday), **TH** (Thursday), **FR** (Friday), **SA** (Saturday), **SU** (Sunday). Press CLOCK to complete the setting.

Clock settings


Press the CLOCK button, then press HOUR and the clock will flash. Press the HOUR button repeatedly to select the current hour. Press CLOCK to complete the setting.

Setting minutes

Press the CLOCK button, then press MIN and the minutes will flash. Press the MIN button repeatedly to select the current minute. Press CLOCK to complete the setting. Seconds will start counting from 0-60 after each setting.



NOTE: Holding down the WEEK button on the main screen will add 1 extra hour (shown as **+1H**). This function can be used, for example, when changing daylight saving time/winter time.

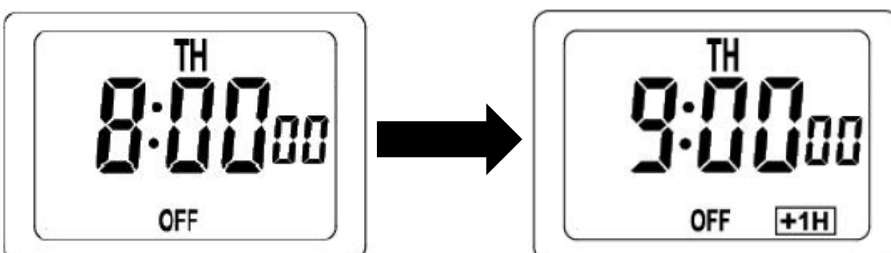

DEVICE STATUS

On the main screen, press the PROG button to switch between statuses.

AUTO ON - The device is switched on + follows the set mode and function

AUTO OFF - The device is switched off + is controlled by the set mode and function


ON - The device is still on

OFF - The device is still switched off

MODE SETTINGS

Up to 18 modes can be set. Press the PROG button for about 3 seconds (if you are on the main screen) to enter the mode settings.

The following screen will appear when you enter the mode settings. The lower left corner shows the mode number and whether it is ON or OFF.

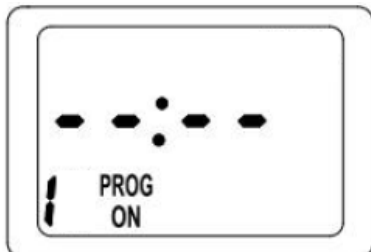

Switching on in mode 1 (1 ON)

- Press the WEEK button repeatedly to set the day or days to switch on in mode 1.
- Press the HOUR button repeatedly to set the hour.
- Press the MIN button repeatedly to set the minute.



Shutdown in mode 1 (1 OFF)

When you have finished setting the power-on mode, press the PROG button to switch from 1 ON to 1 OFF.

- Press the WEEK button repeatedly to set the shutdown day or days in mode 1.
- Press the HOUR button repeatedly to set the hour.
- Press the MIN button repeatedly to set the minute.



NOTE: You can set the days (for on and off) in the modes in the following options:

single day of the week

Mo Tu We Th Fr

Sa Su

Mo Tu We Th Fr Sa

Mo We Fr

Tu Th Sa

Mo Tu We

Th Fr Sa

Mo Tu We Th Fr Sa Su

Once you have finished setting the shutdown in mode 1, you can go back to the main screen by holding down the PROG button, or press the PROG button briefly to switch to other modes and set them in the same way according to your preferences.

Random function (RND)

Pressing the HOUR button for approximately 3 seconds (if you are on the main screen) will trigger the Random function and **RND** will appear on the display. The Random function is used to randomly switch the power on and off. For example, it can be used to power a lamp when you are not at home.



Countdown function (CTD)

Press and hold the PROG button until the mode settings appear. Press the PROG button repeatedly to go to the last mode for which CTD is displayed.

Use the HOUR and MIN buttons to set the time after which the device will switch off.

Confirm the settings by pressing the CLOCK button to go to the main screen.

To switch to the countdown, press and hold the HOUR and MIN buttons and use the PROG button to activate/stop the countdown. **CTD** will appear on the display.


Use the CLOCK button to switch between the timer and the main screen.

The timer can be set directly from the main screen by pressing the HOUR and MIN buttons together.

Use the HOUR and MIN buttons to set the time after which the device will switch off.

Press the CLOCK button to save the timer and go to the main screen. The display will show **CTD**

Use the CLOCK button to switch between the timer and the main screen. To start the timer, scroll to the timer display and press the PROG button.

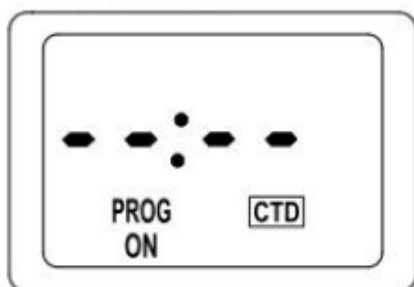

To cancel the countdown, go to the countdown display and press and hold the HOUR and MIN buttons together. When setting the timer, you can use the  button to reset the settings.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.

On request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz/en.



 SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.